

Ballpoint / LED Light / Precision Stylus

- Rotate top clockwise to first locking position to extend stylus tip.
- Rotate clockwise again to retract tip.
- Remove battery saver for LED light. Press light for on / off.

UTILITY PATENT 9684391

