

 
# GL2105 Multi-Function Light with Wireless Speaker



## What's Included:

- 1 x Flashlight
- 1 x Lantern Base with Wireless Speaker
- 1 x USB to Micro-USB Charging Cable
- 1 x Instruction Manual

## Wireless Speaker Functions:

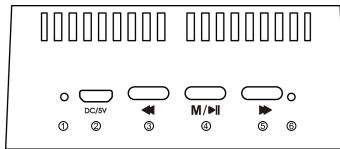

1. Charging Indicator
2. Charging Port (Micro)
3. Skip Backward / Vol Decrease
4. ON/OFF / Play / Pause
5. Skip Forward / Vol Increase
6. Wireless Indicator

## Tech Specifications:

- Input Power: DC 5V
- Playing Time After Full Charge: 4 hours playback time at 70% volume.
- Charging Time: 2 hours
- Pairing Name: GL2105

## Instructions:

(Be sure to fully charge the speaker before using it for the first time.)

### 1. Charging the Speaker:

- Connect the provided charging cable to a power source and to the micro USB port on the speaker (2).

The LED indicator light (1) will glow red when charging and turn off when fully charged.

### 2. Wireless Setup:

- Press and hold ON/OFF Button (4), LED Indicator (1) will then slowly flash BLUE.
- Turn on the wireless function on your mobile device. Select "BlueTooth" pairing name.
- Wireless indicator will flash BLUE if successfully paired.
- \* Speaker will automatically pair if the mobile device has been paired before.
- Press and hold ON/OFF button to turn off the device.

### 3. Playing Music:

- Short press Play/Pause button (4) to pause music. A second short press will resume playing music again.
- To play the previous track, short press Skip Backward/Vol Decrease button (3). Long press to reduce the speaker volume.
- To play the next track, short press Skip Forward/Vol Increase button (5). Long press to increase the speaker volume.

## IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using this product, always follow basic precautions:

- Read all the instructions before using the product.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or hands into the product.
- Do not expose product to rain or snow.
- Using the product incorrectly may result in the risk of fire or injury to persons.
- Do not use the product in excess of its output rating. Overloading outputs above rating may result in a risk of fire or injury to persons.
- Do not use the product if it is damaged or modified. Damaged or modified product may exhibit unpredictable behavior resulting in fire, explosion and/or risk of injury.
- Do not disassemble the product. Take it to a qualified service professional when services or repairs are required. Incorrect reassembly may result in a risk of fire or injury to persons.
- Do not expose product to fire or excessive temperature. Exposure to fire or temperature above 100°C/212°F may cause explosion.
- Have servicing performed by a qualified repair professional who will use identical replacement parts.
- Switch off the product when not in use.

## CAUTION AND SAFETY

Do not expose to moisture, sunlight, or other heat sources. Keep away from children and ensure all adults who use this product read and follow these instructions and warnings. Operating temperature range between 32°F and 113°F. Use correct voltage charger, 5V only. Battery must be recycled or disposed of properly.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## LANTERN/FLASHLIGHT COMBO

Durable ABS lantern body with removable rubberized stand-alone flashlight

## BASIC OPERATION

- Click button to turn on flashlight.
- Insert flashlight into top of lantern to illuminate lantern.

## BATTERY REPLACEMENT

- Unscrew the flashlight.
- Insert the batteries into the battery compartment in the directions marked (-) and (+).
- Place the battery compartment back in the flashlight in the same direction as the bulb (top of flashlight).
- Do not mix rechargeable and non-rechargeable batteries. Do not mix batteries of different types/brands.

## WARNING:

This product is not a toy and should not be handled by infants and small children.

Made in China